

Assembly & Installation


Velcro Installation

EGAN

The hook side (rough side) of the Velcro tape comes pre-attached to the back of each panel. Matching peel-and-stick pieces of the loop tape (softer side) are supplied. The hook tape is placed approximately 1/2" in from the edges on the back of the panel and is 1" wide. Match this placement on the wall with the loop tape.

Make sure the wall is free of grease or dirt before applying the loop tape. The adhesive on the tape is pressure sensitive, so it is important to press the loop tape firmly against the wall - use your thumb and run it down the length of the tape while pressing it against the wall.

THE LOOP TAPE MUST THEN BE STAPLED TO THE WALL.

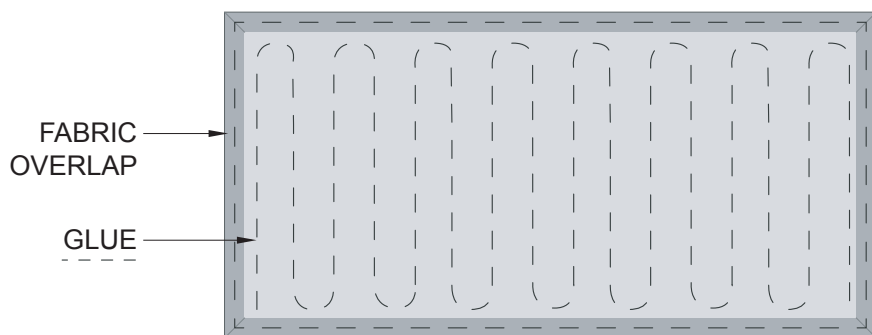


BACK VIEW OF PANEL

After stapling, apply construction adhesive to the back of the panel and then hang each panel by connecting the hook tape on the back of the panel to the loop tape on the wall.

DO NOT cover the Velcro with the construction adhesive. Make sure to get some of the adhesive on the fabric that is wrapped onto the back of the panel, but don't get adhesive too close to the wall. The Velcro will hold the panel in place while the construction adhesive dries.

NOTE: Velcro mounts are intended to be used in conjunction with a hi-strength construction adhesive for mounting panels. Failure to install as instructed with Velcro and adhesive will void the Egan warranty.

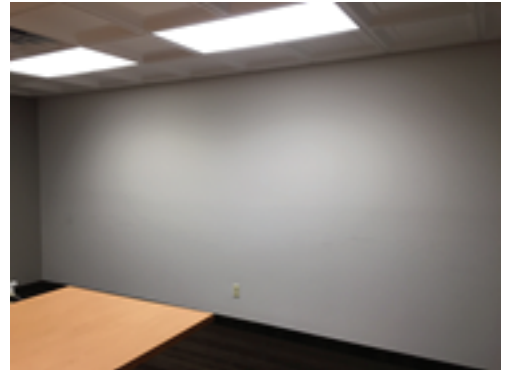

Wall Area to be Taped



Taped Area



Mounted Panels