

Assembly & Installation


Z-Clip

EGAN


Read these instructions completely before installing any panels.

1. Slide the loose z-clips provided under the clips already attached to the rear of the panel.
2. Measure down from the top or up from the bottom to identify where those clips rest relative to the edge of the panel.
3. Securely attach the loose clips to the wall (based upon your previous measurements) relative to where the panel will hang. Be sure to leave at least a 1" space above where the panels hang so the panel can be lifted over and then placed on the wall attached clips.
4. Hang the panels.


IMPORTANT NOTE: Screws have been provided that are appropriate to attach the clips to the walls in many situations. However, they may not be the correct screw for your installation. You may need some type of molly or wall anchor to make sure the z-clip will stay tightly attached to the wall. Determine which type of fastener will work best for your installation and use it instead of the provided screws when necessary.

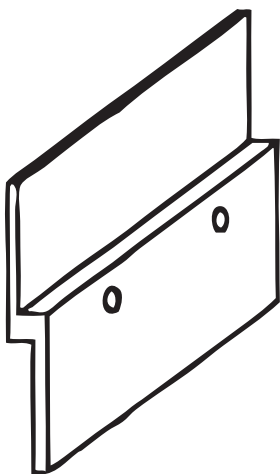


Z-Clip (3D View)

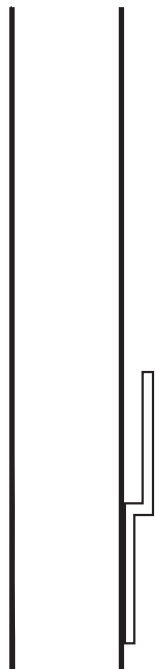

Wall with Z-Clip



Panel with Z-Clip

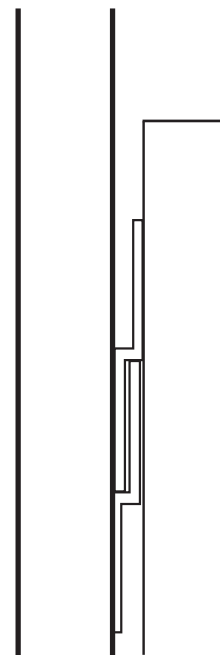

Panel Hung on Wall with Z-Clip