

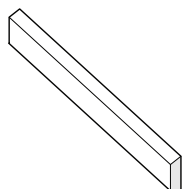
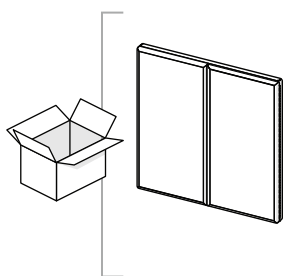


Assembly & Installation

Egan Wood Cabinet





CEWR CARW CEWB CABW CEWT CATW

EGAN

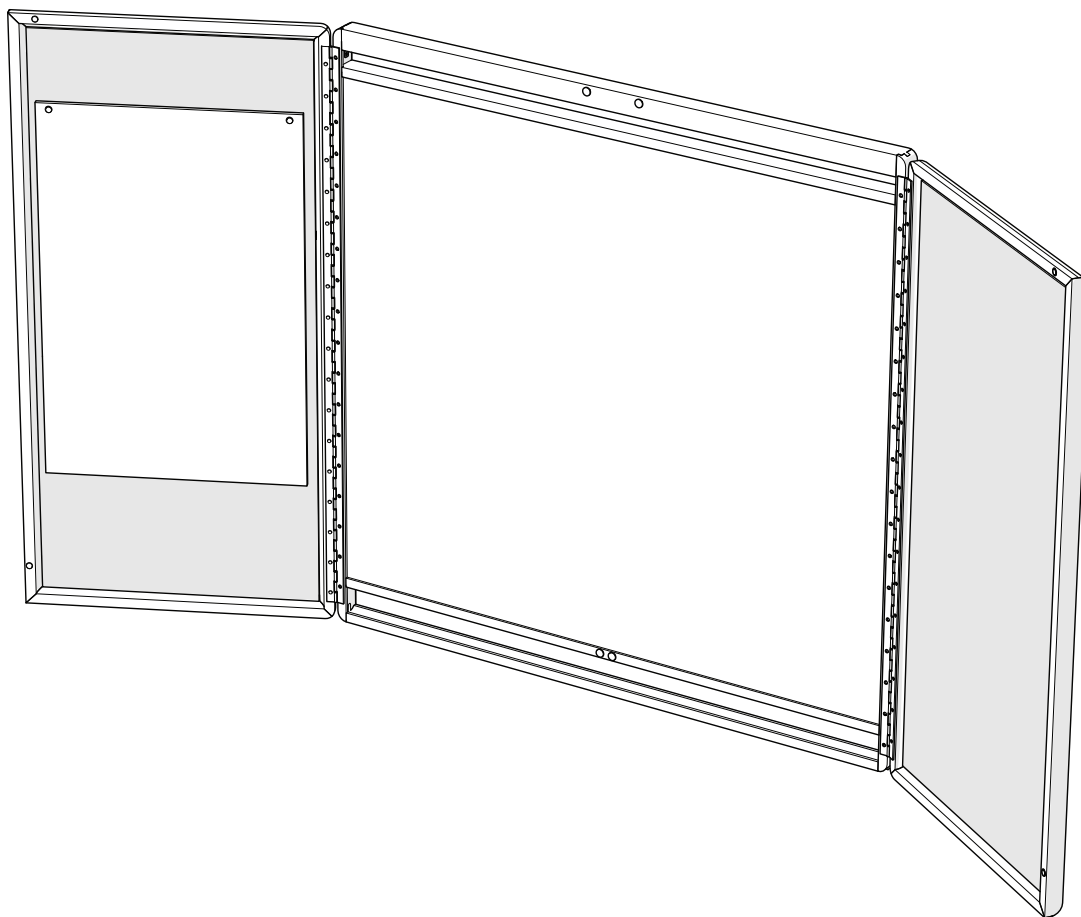


x4

i





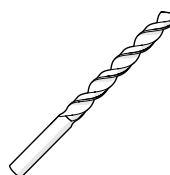
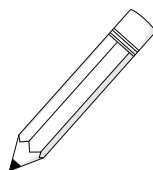
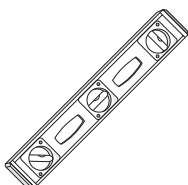
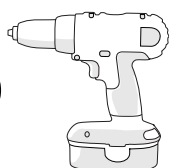




1/8"

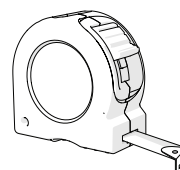

Assembly & Installation



2 of 4

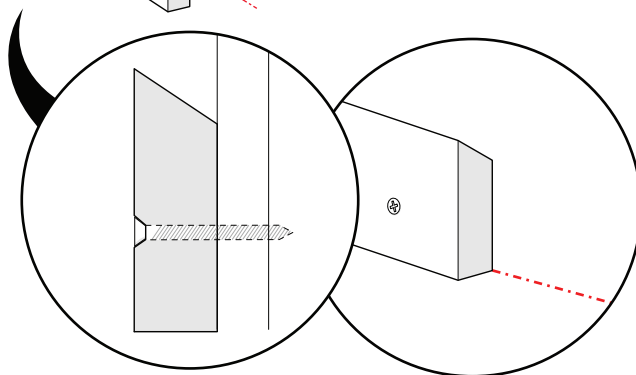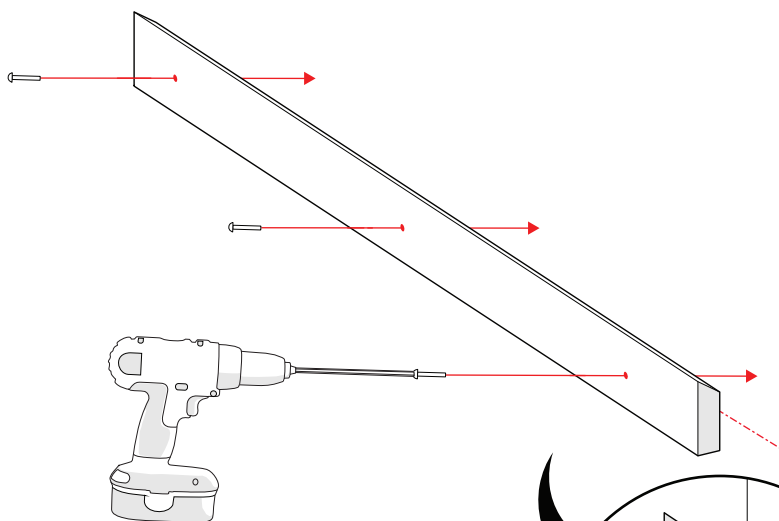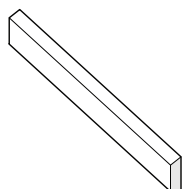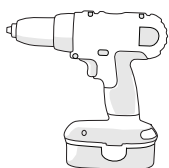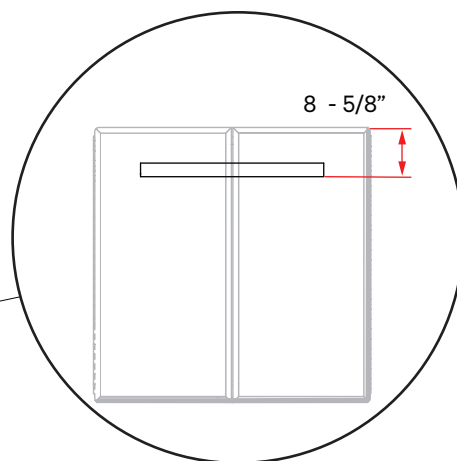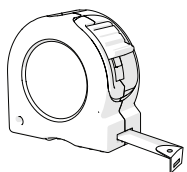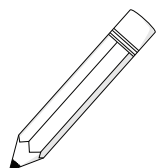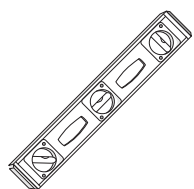

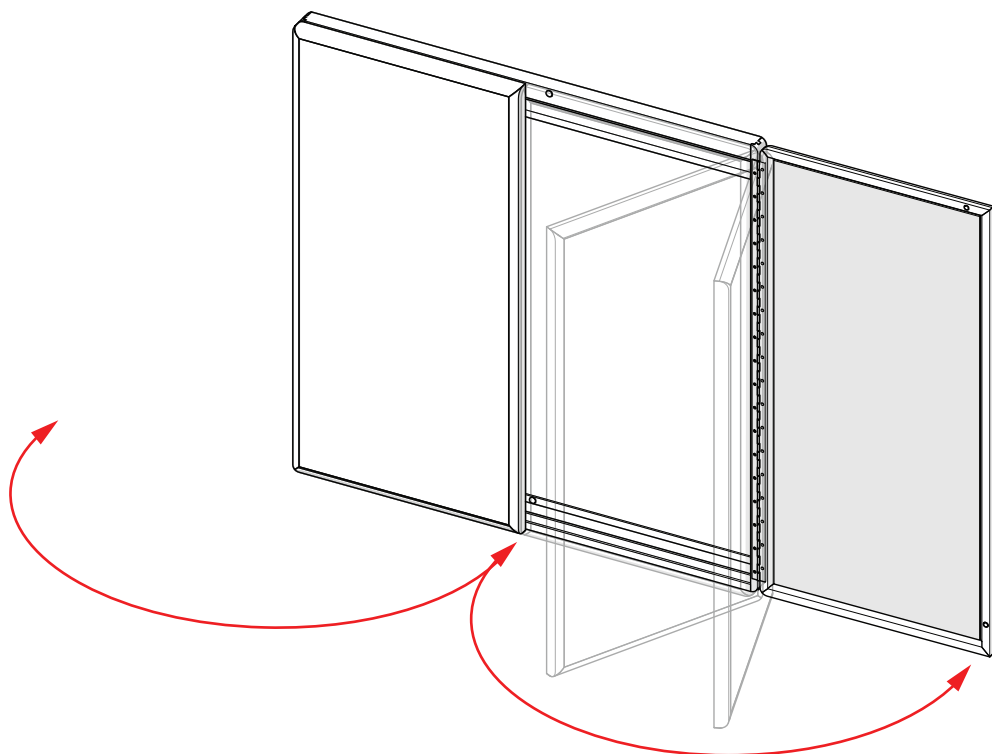
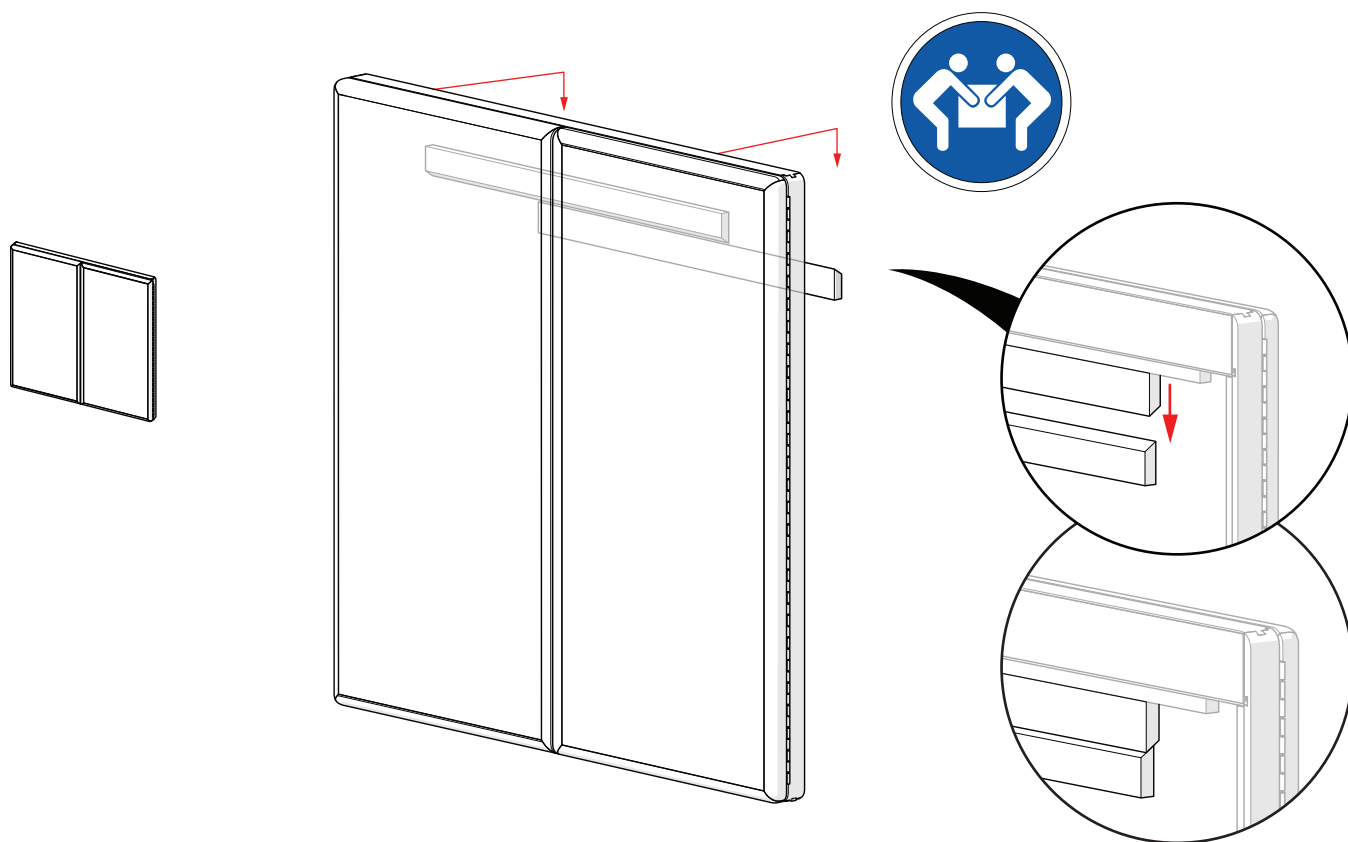


Assembly & Installation

4 of 4

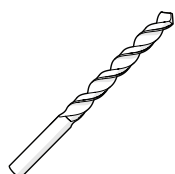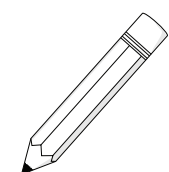

1/8"

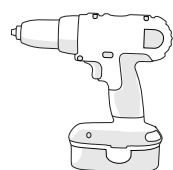

x4

